



# EVEN STEVEN

## VINYL GATE

(4'H X 4'W)

# ASSEMBLY

## INSTRUCTIONS


VG24100

**60 MIN**

*Approximate assembly time*

*Want to see a video on how to  
assemble this product?*

**Scan the QR code**

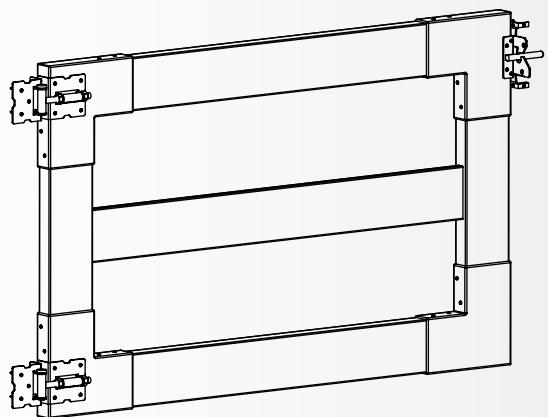

## GENERAL INFORMATION



### IMPORTANT

- + Check the inside of the larger pieces in your box for other materials packed inside.
- + When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- + We recommend an area approximately 5'x 8' for unobstructed assembling.
- + You should not need to use excessive force when assembling components.

## MISSING OR DAMAGED PARTS?

### VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer care department.

 [parts.nychbrands.com](http://parts.nychbrands.com)

 [hmmm@wambamfence.com](mailto:hmmm@wambamfence.com)

 **704-892-5222 / 877-778-5733**

*Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.*

To help you quickly and accurately, please have reference item number **VG24100** and the specific part name which can be found on page 5. It is helpful if you can provide the batch lot which is a stamped number inside the box.

## NEED ASSEMBLY HELP?

**Please give us a call at 704-892-5222 / 877-778-5733.**

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process.

## NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

## GENERAL INFORMATION

### 1. Read over fence instructions first.

Your gate and fence will work better together if you first take the time to read and understand your fence.

### 2. Pre-assemble the gate frame.

Please do not screw the gate frame together until you have temporarily assembled the gate frame. In other words, do a dry run first. This will ensure:

1. That you have everything necessary to complete the gate.
2. That you will have assembled the gate frame in the correct order.
3. All of the pieces fit and function properly.
4. The gate height and width are similar to the measurements shown on page four.


It's easier to troubleshoot when things are not screwed together. After you assemble your gate correctly, please disassemble as necessary, and use the 1¼" self-drilling stainless steel screws to permanently assemble the gate.

### 3. Install your gate posts before your fence posts.

Your fence panels will be more forgiving for a custom fit than your gate. Position and install your gate posts before you do anything else.


### 4. Do not hang your gate system off a single non-supported post.

Your gate will perform better and last longer if your hinge post is connected to a panel of fence that is connected to another post. This way, the weight strain will be transferred onto two posts versus just one. Installing fence panels on both sides of your gate is ideal in all situations. If this is not possible because of space restrictions, please contact us for alternative solutions.

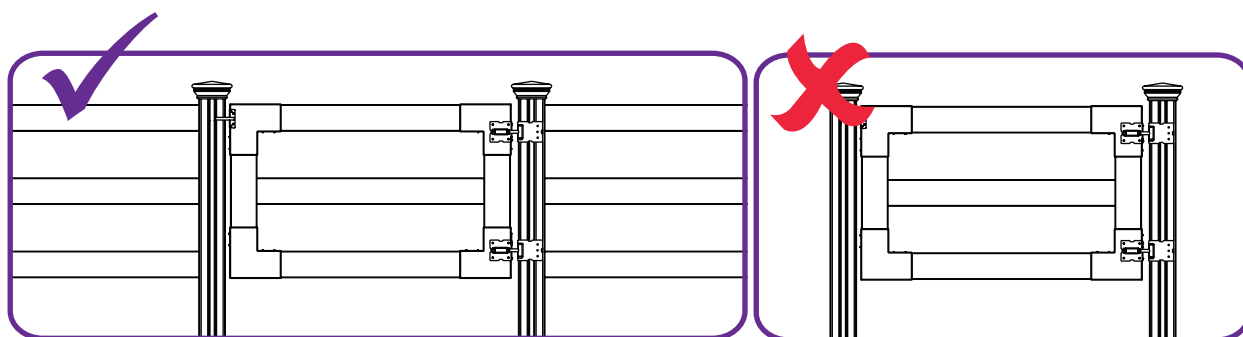


## DETAILED PRODUCT DIMENSIONS AND SPECIFICATIONS


## Gate Assembly

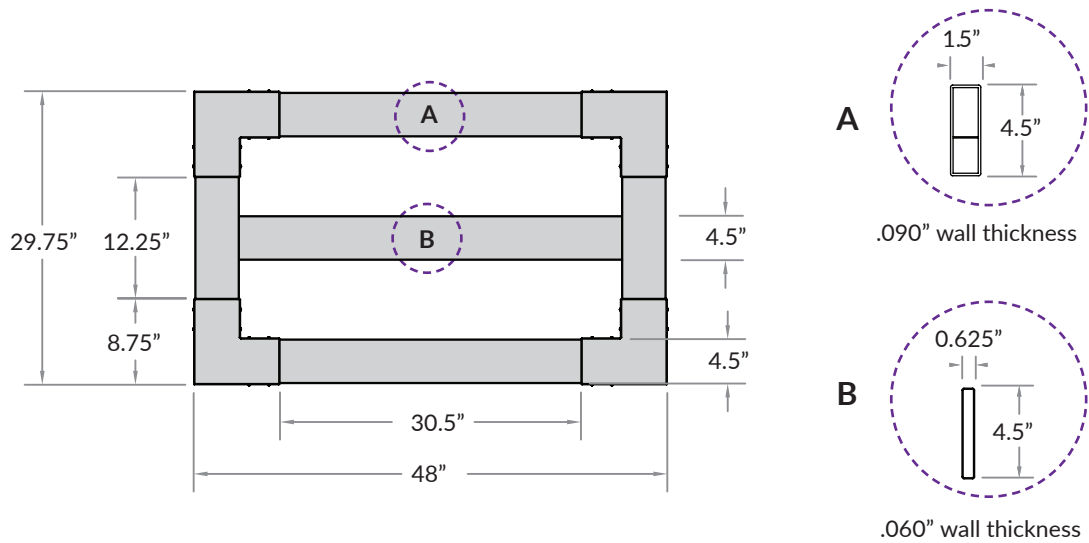

## Gate Installation

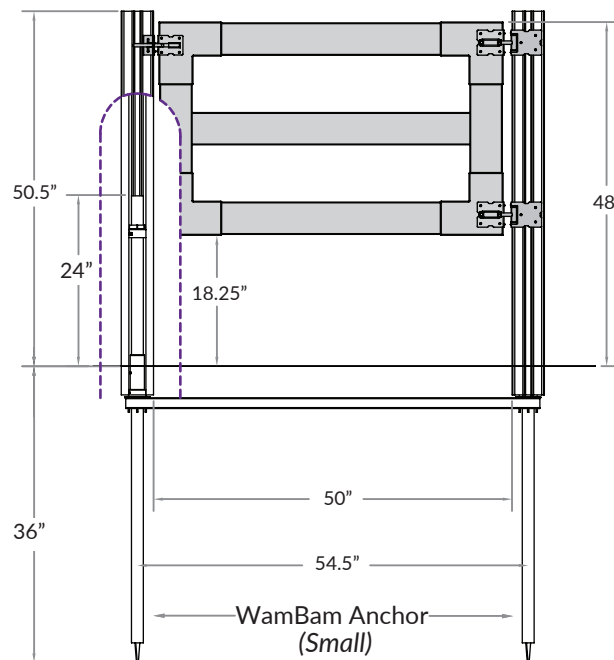


## STEP 1: LAY OUT MATERIALS

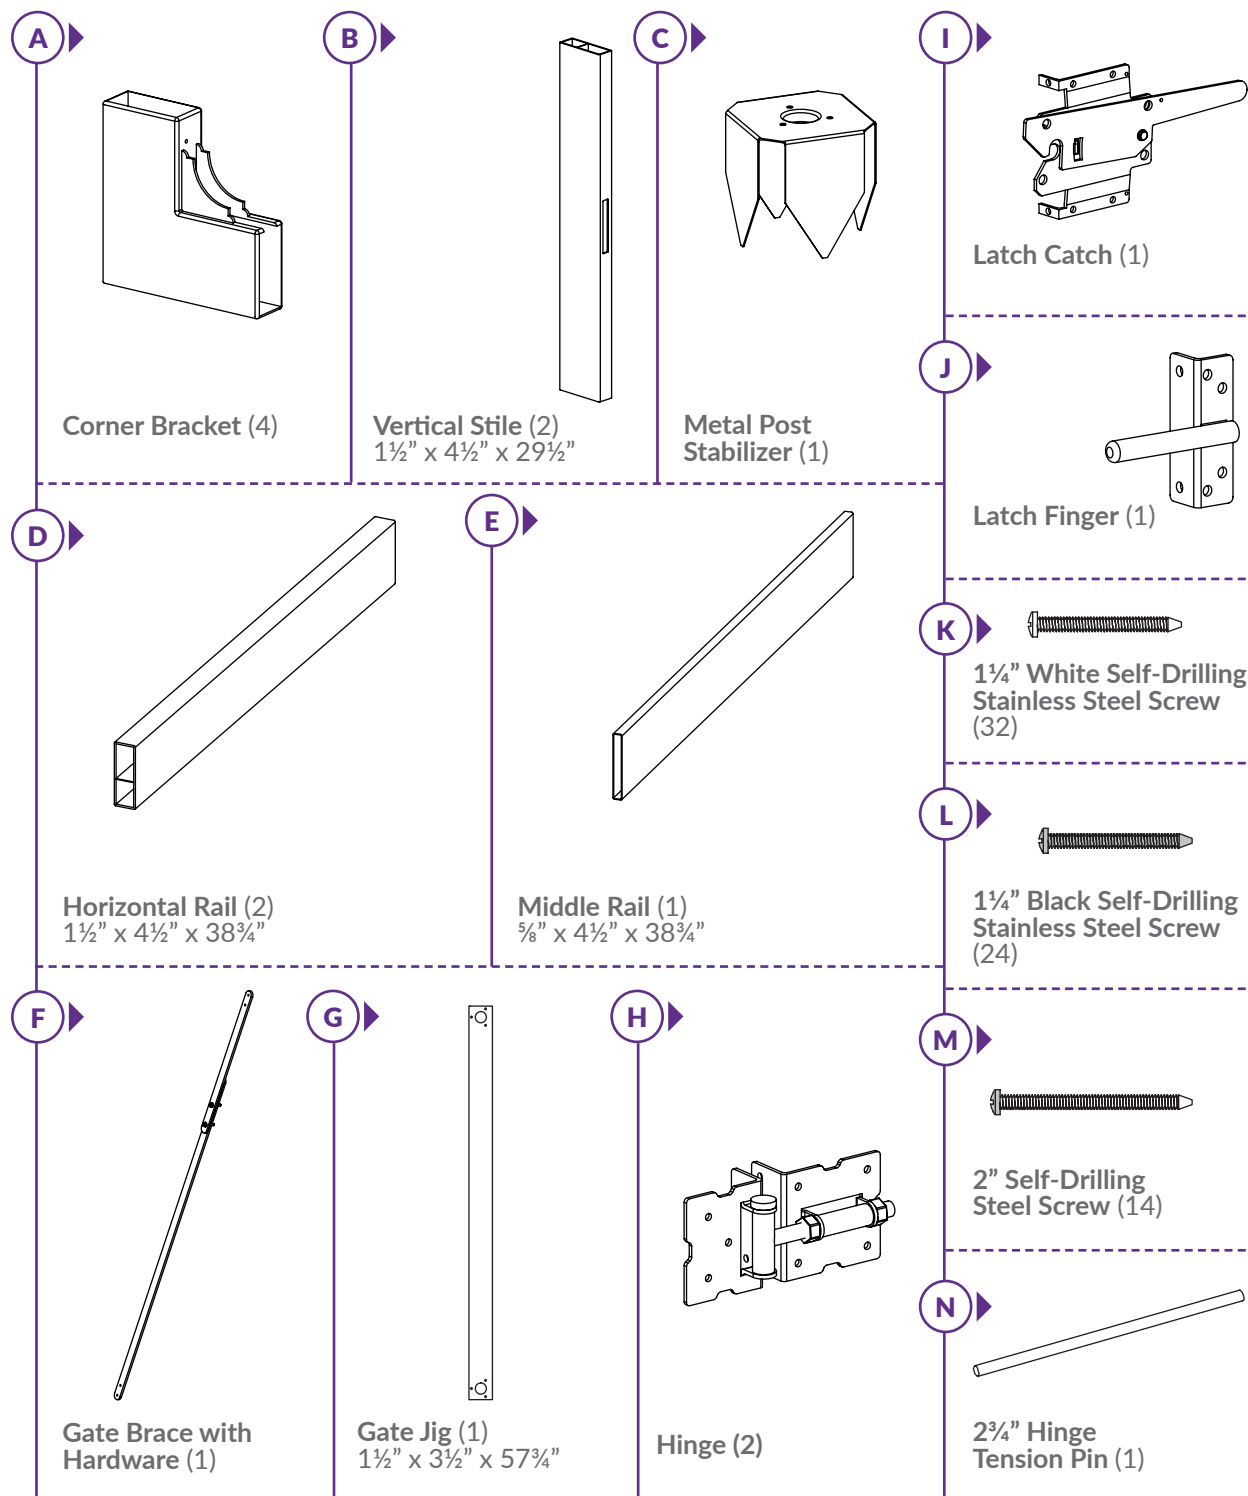

## STEP 2: INSTALL GATE JIG, POST ANCHORS, AND POSTS

### STEP 2.1 ▶


- ▶ Identify the location of your gate. Dig a trench 60" long x 6" wide x 5½" deep.

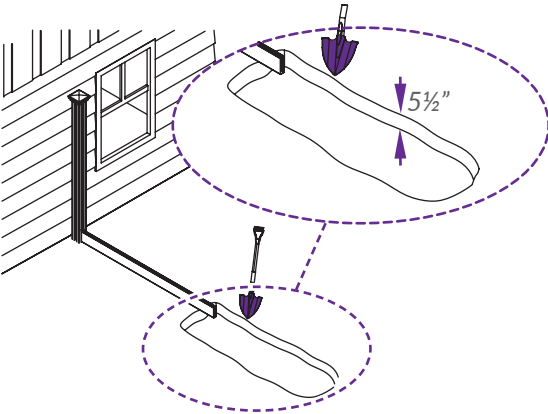

### STEP 2.2 ▶


- ▶ Identify the location of the Metal Post Stabilizer (C) and pound it into the ground. Temporarily place the anchor positioner into the metal post stabilizer and determine position.

**Note:** Metal post stabilizer to be used only on hinge post.

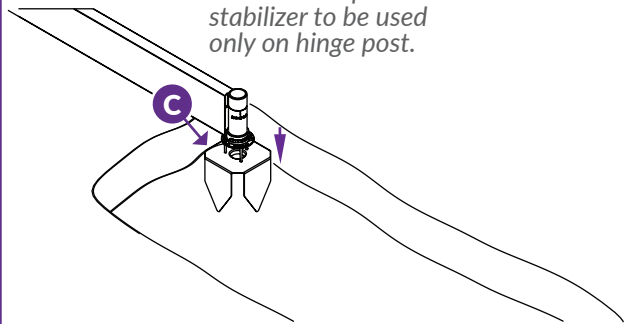


### STEP 2.3 ▶

- ▶ Place the Gate Jig (G) over the metal post stabilizer.

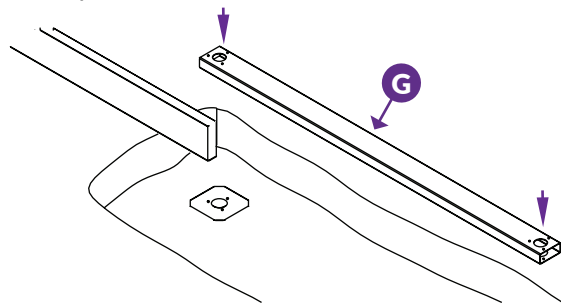


### STEP 2.4 ▶

- ▶ Place the anchor positioners into the gate jig. The pegs on the bottom of the anchor positioners will insert into both the gate jig and the metal post stabilizer.

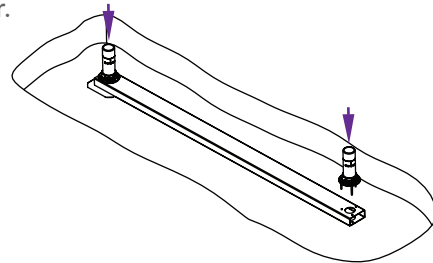


### STEP 2.5 ▶

- ▶ Pound your post anchors into place. See fence instructions, if necessary, for more information on how to install anchors. Adjust the leveling donuts and install the posts.

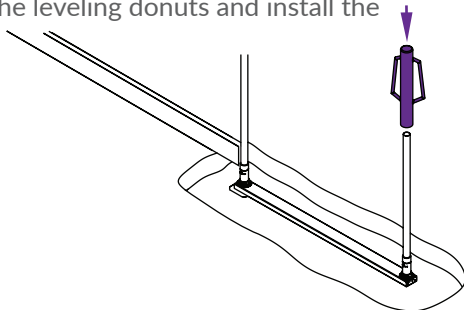


### STEP 2.6 ▶

- ▶ Backfill excavated dirt over the gate jig.

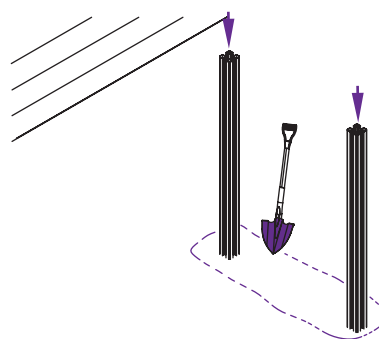

### STEP 2.7

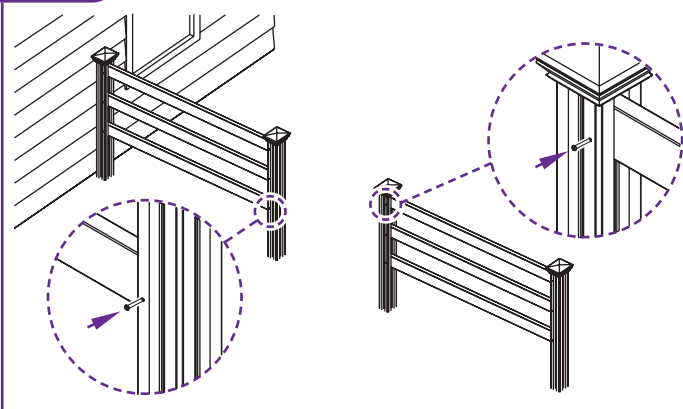


► Make sure to fasten the fence panels before attaching the gate.

## STEP 3: ASSEMBLE THE GATE FRAME


### STEP 3.1

► Insert (1) Vertical Stile (B) until it bottoms out inside of (1) Corner Bracket (A).

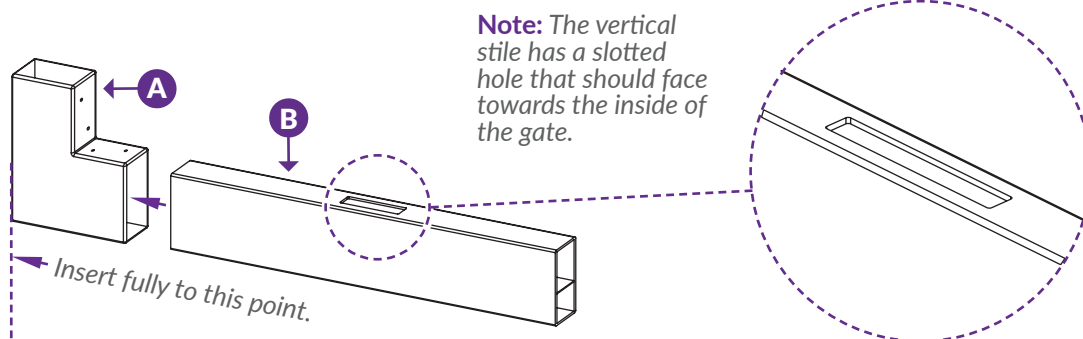


### STEP 3.2

► Insert the vertical stile until it bottoms out inside of the opposite corner bracket.

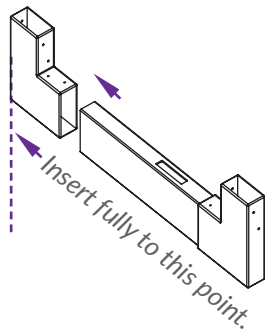


### STEP 3.3

► Insert the Horizontal Rails (D) and Middle Rail (E) into the vertical stile.

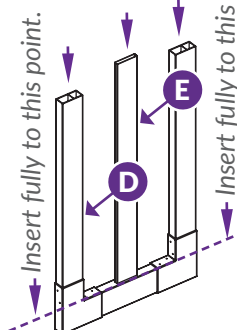

### STEP 3.4


► Repeat steps 3.1 and 3.2, and insert the partially assembled gate from step 3.3 as illustrated.

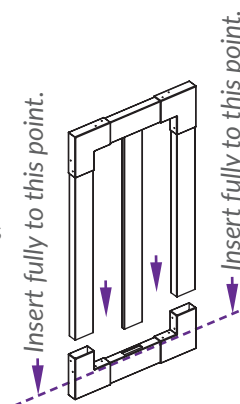

## STEP 4: SECURE GATE FRAME AND CORNER BRACKETS

### STEP 4.1 ▶

▶ Screw the corner brackets with (32) 1¼" White Self-Drilling Stainless Steel Screws (**K**) as illustrated. The corner-to-corner measurements must be the same to ensure the gate is square, and the width of the gate should be 48".

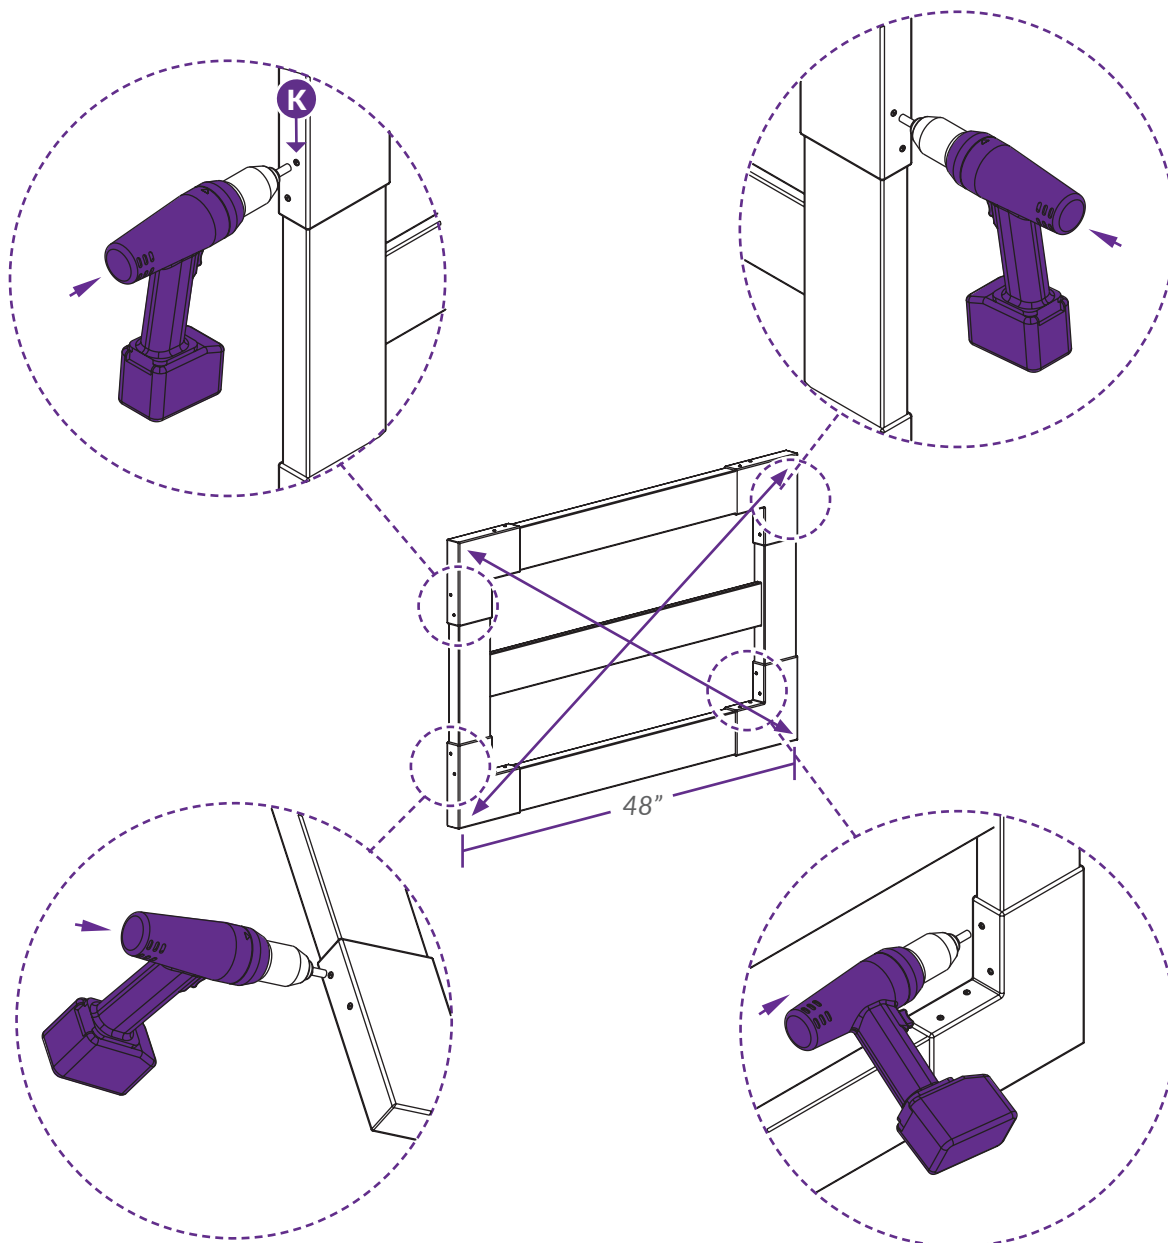




## STEP 5: FASTEN HINGES AND GATE LATCH

### STEP 5.1


► Fasten the Hinges (**H**) and the Latch Finger (**J**) onto the gate brackets as illustrated using (18) 1¼" Black Self-Drilling Stainless Steel Screws (**L**).

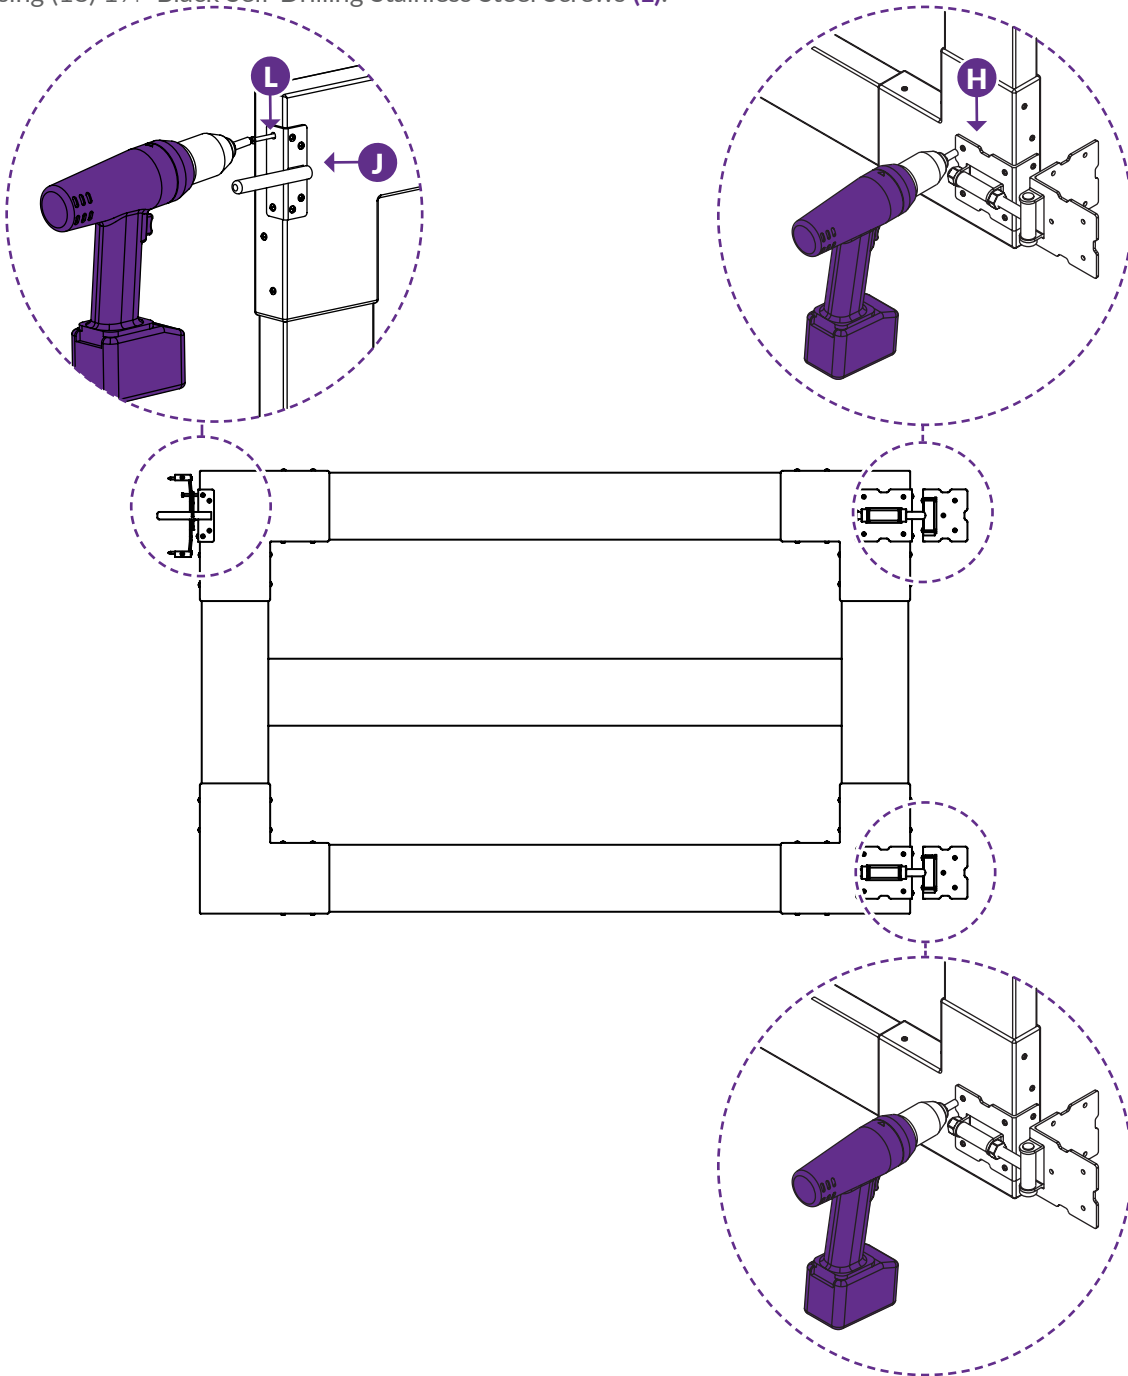

## STEP 6: ASSEMBLE AND FASTEN GATE BRACE


### STEP 6.1 ▶

▶ Assemble the Gate Brace (**F**) by sliding the larger square tube over the smaller square tube. Align the holes and install using the hardware (2 hex bolts, 2 lock washers, and 2 nuts) included with the gate brace.

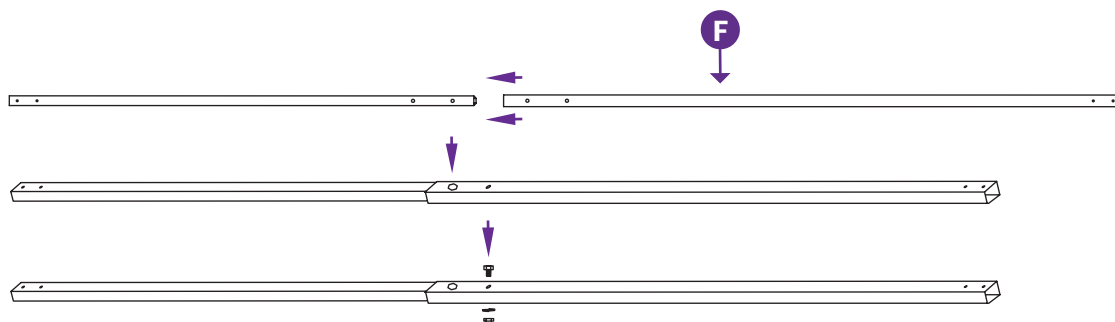

### STEP 6.2 ▶

▶ Double check that the gate is square and then fasten the gate brace into place with (4) screws included in the gate brace packaging.

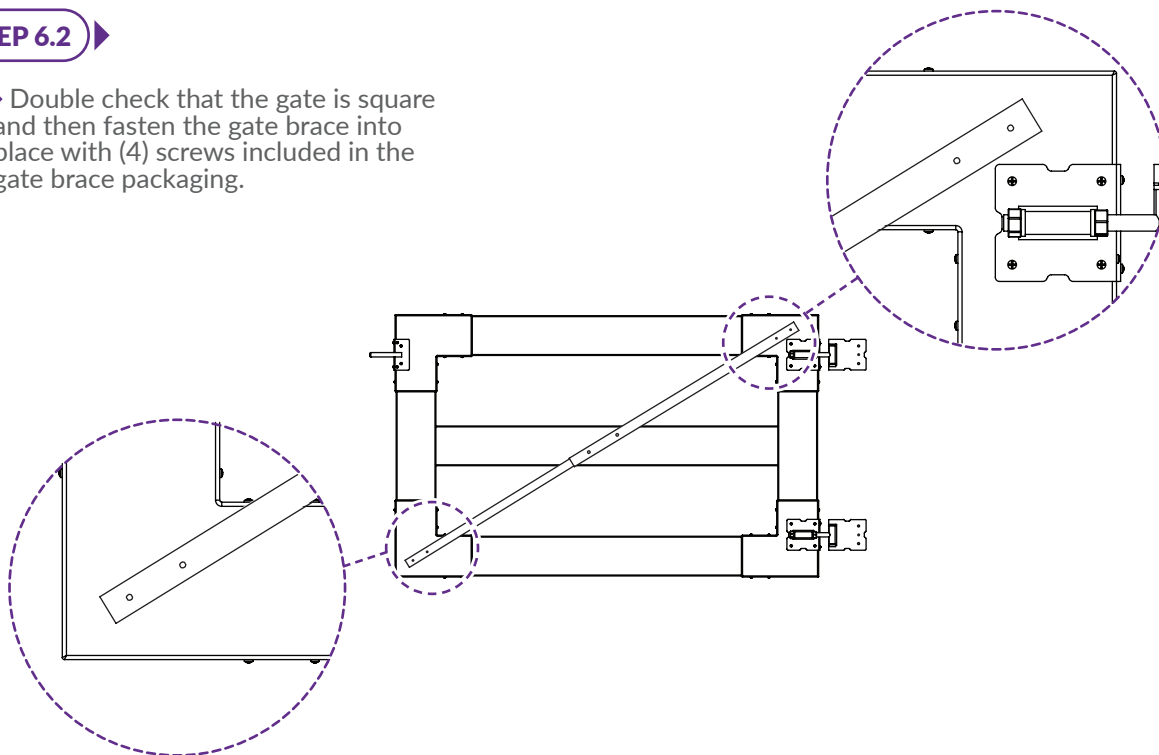


## STEP 7: ALIGN GATE AND SECURE HINGES TO POST

### STEP 7.1

- ▶ Align the gate with the horizontal fence rails.


**Note:** Both the fence and the gate horizontal rail spacing can be adjusted freely to lower heights.

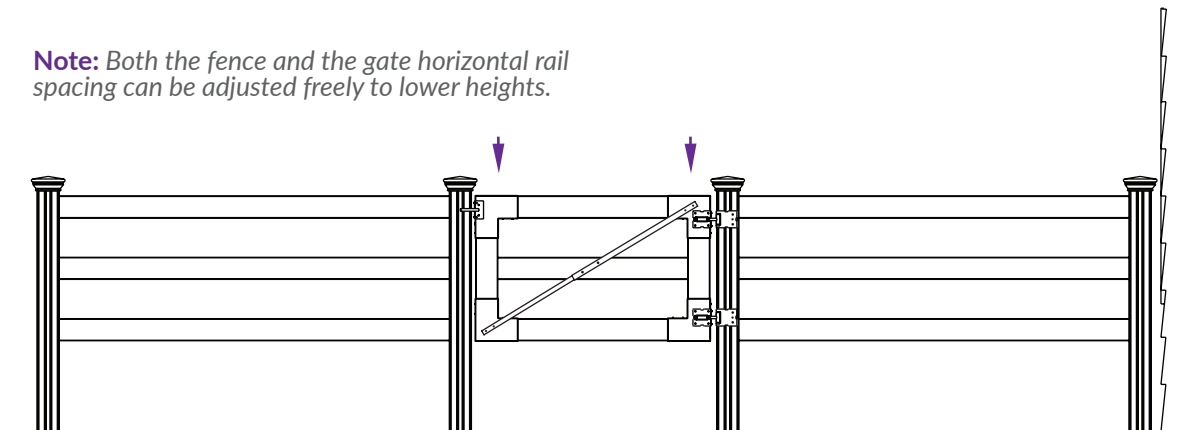

### STEP 7.2A

- ▶ Fasten the hinges to the posts using (6) total 2" Black Self-Drilling Stainless Steel Screws (M).



**Note:** See the next page on how to position the screws on the post side of the hinge.

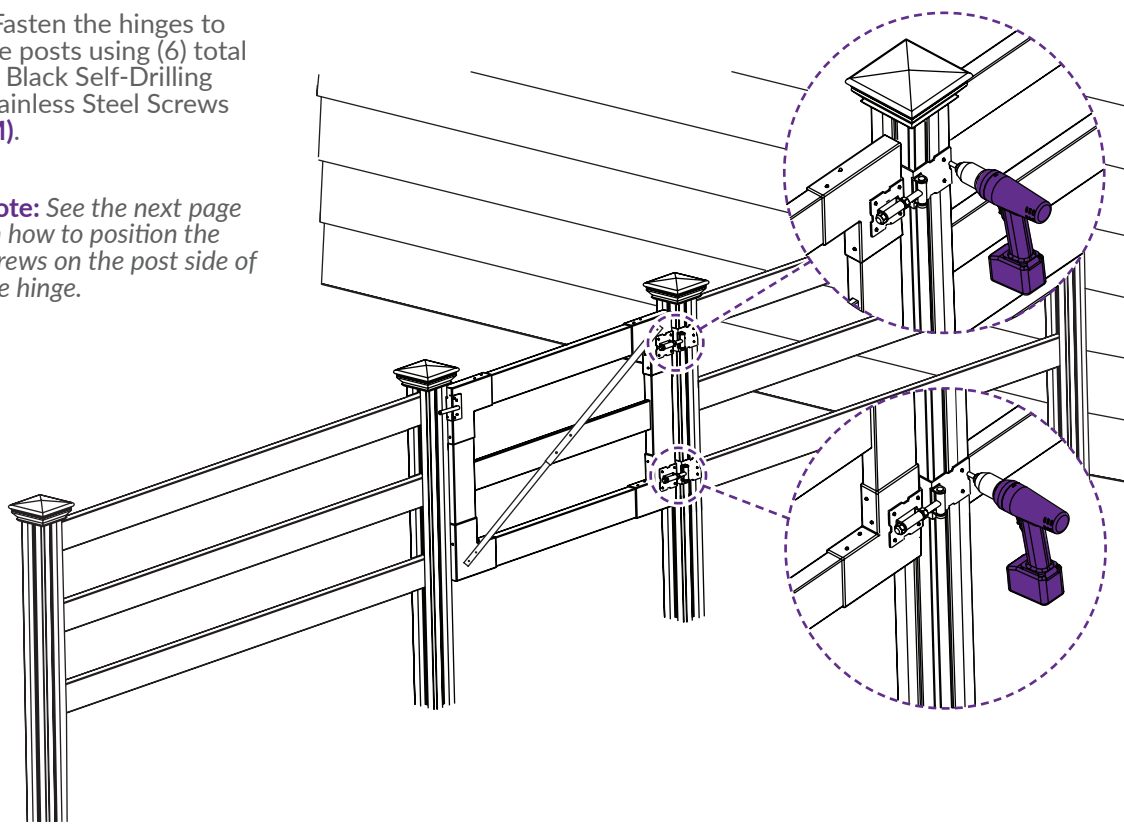

**STEP 7.2B** ▶

▶ **How to position the screws on the post side of the hinge:** Using a  $\frac{1}{8}$ " drill bit, pre-drill the holes for the hinge screws as illustrated. Angle your drill slightly as illustrated.

**Note:** Swing the gate open and pre-drill four more holes for the hinge screws as illustrated.

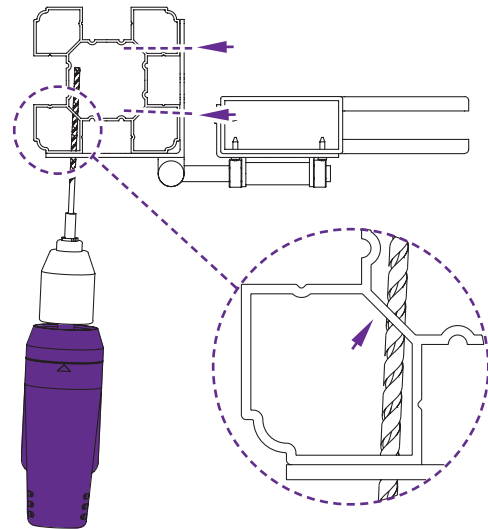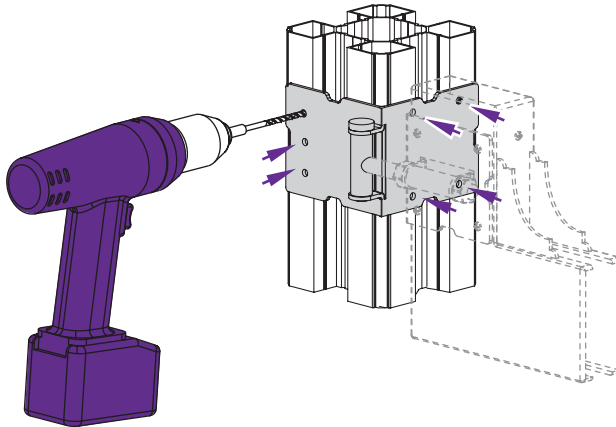


Top View


**Note:** Angle your drill to pierce into the angled portion of the post as illustrated.

**STEP 7.2C** ▶

▶ Fasten (3) 2" self-drilling stainless steel screws through the drilled holes.

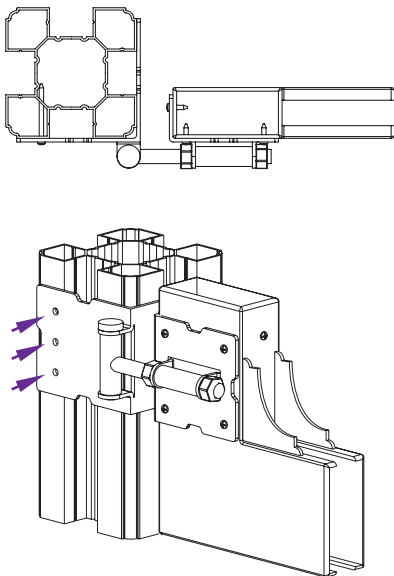**STEP 7.2D** ▶


▶ Fasten (4) 2" self-drilling stainless steel screws through the drilled holes. Repeat steps 7.2C and 7.2D for the second hinge.

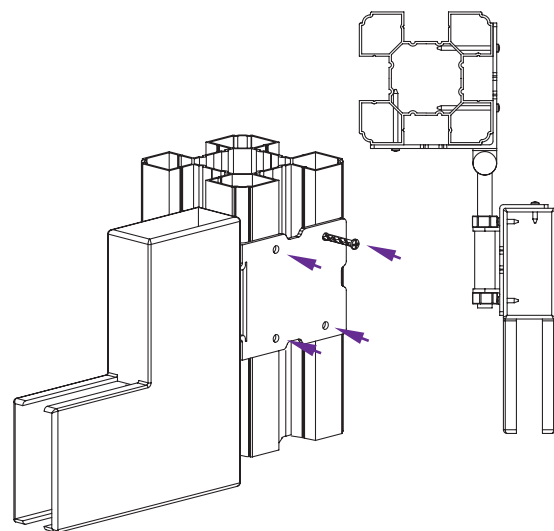

## STEP 8: LEVEL GATE AND ADJUST HINGES


### STEP 8.1

- ▶ Using a level, make sure the gate fits and functions with the latching post.

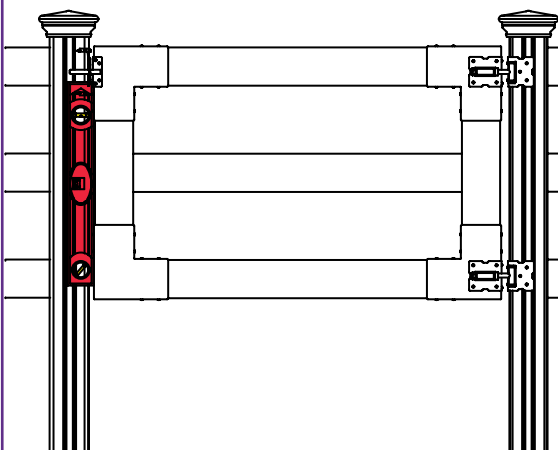



### STEP 8.2

- ▶ The hinges can be adjusted moderately to bring the gate into level alignment with the post.

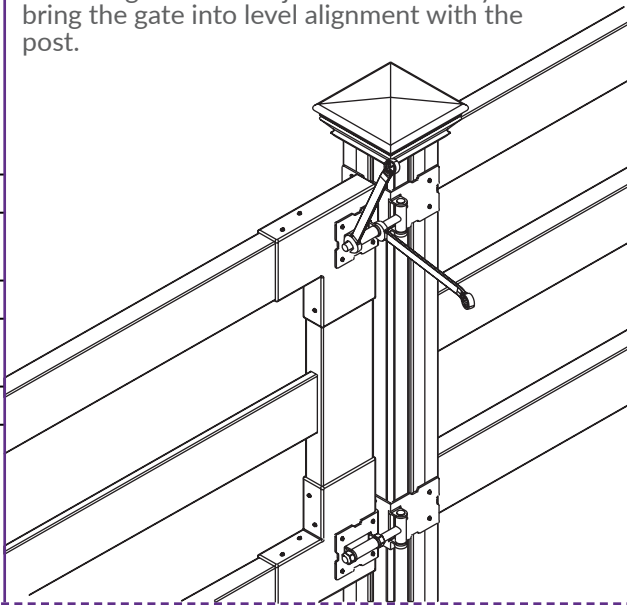

### STEP 8.3


- ▶ To set the tension on the gate hinge, insert the 2 $\frac{3}{4}$ " Gate Tension Pin (N) into one of the holes on hinge and rotate it to release tension on the gate hinge to remove pin.

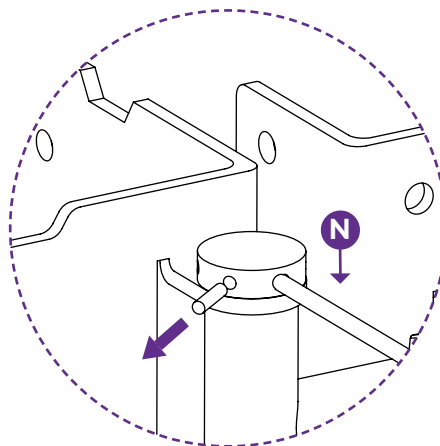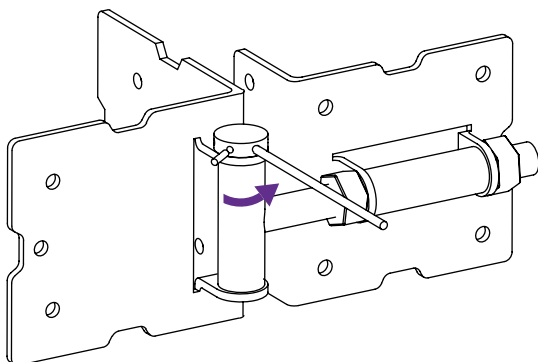

## STEP 9: INSTALL LATCH CATCH


### STEP 9.1 ▶

▶ Align and fasten the Latch Catch (I) with (6) 1¼" black self-drilling stainless steel screws to fit and function with the gate finger.

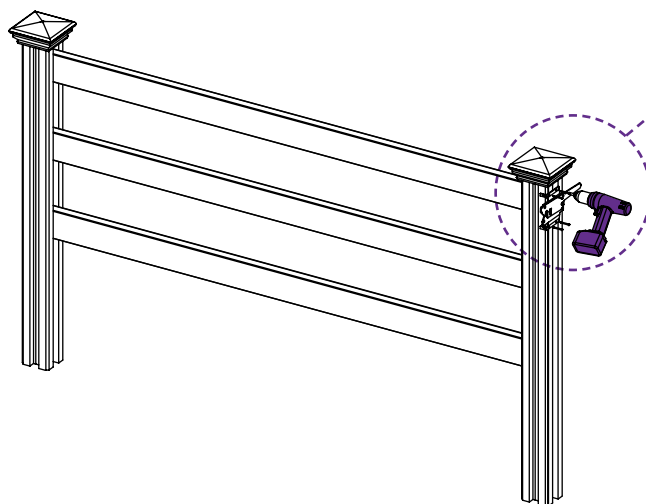

**Note:** The latch is designed for left and right hand applications. Temporarily remove the spring, then bolt and reverse the paddle portion as necessary.


▶ Congratulations! You did it! Go grab a beverage of your choice, admire your handiwork, and show us what you got by entering our annual photo contest!

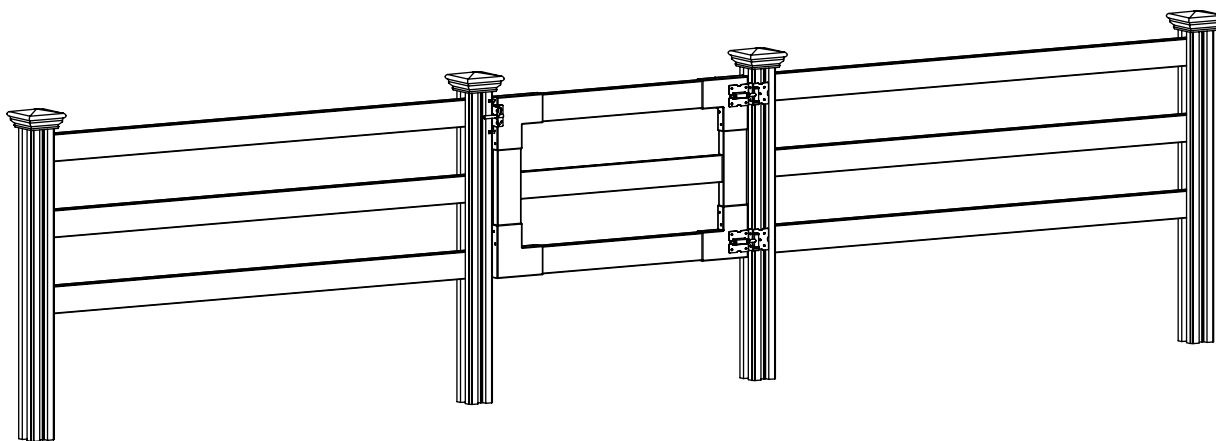

## ALTERNATIVE APPLICATION: INSTALL OVER A SIDEWALK OR PATH

### STEP 1.1 ▶


► **Option 1:** If the sidewalk is less than 52", use the gate jig as a temporary spacer. Proceed installing the panels according to the fence's install guide.

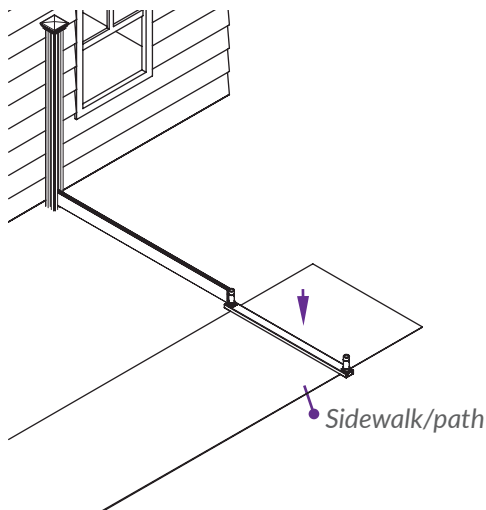

## ALTERNATIVE APPLICATION: INSTALL OVER A SIDEWALK OR PATH

### STEP 1.1 ▶

► **Option 2:** If the sidewalk is wider than 52", use surface mounts and follow the instructions included with them. You must purchase the surface mounts, item SKU SB61000, separately.

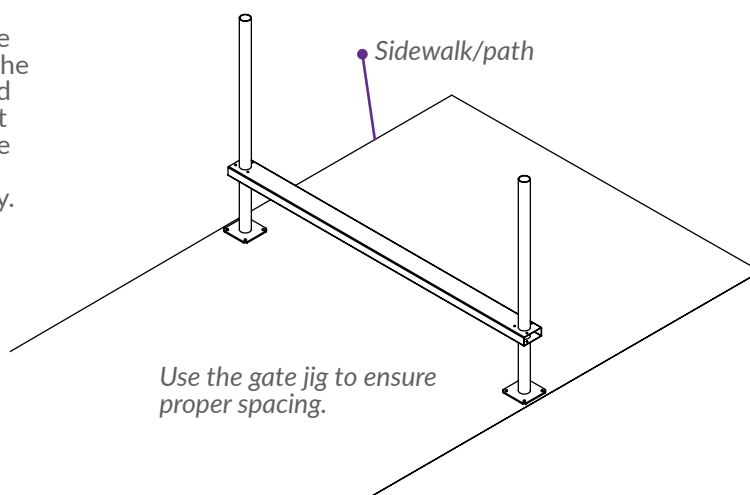

# WamBam

Fun Name. Serious Fence.



6935 Reames Rd. Ste. K.  
Charlotte, NC 28216



[hmmm@wambamfence.com](mailto:hmmm@wambamfence.com)

704-892-5222  
877-778-5733



[WWW.WAMBAMFENCE.COM](http://WWW.WAMBAMFENCE.COM)